



# BLACK LIGHT INSTRUCTIONS

*\*Keep all packaging materials after opening. Black light must be returned in same box / packaging.*

## 1. PLUG IT IN

Use power cord provided to plug black light into an outlet.

## 2. SET ON TABLE OR TRIPOD

Put light on a table. Point at area you want to glow. Adjust the angle of light with the knobs and brackets. Twist knobs left to loosen, and right to lock in place. *If using optional tripod, see tripod instructions.*

## 3. YOU'RE DONE!

Make sure display screen shows 2554. If not, see Troubleshooting.

*NOTE: If screen off, press and hold any button until screen lights up.*



## TROUBLESHOOTING

1. **No Light?** You won't see a beam of light - UV is invisible. White/neon objects will glow under UV light.

## 2. **Light Not Working / Reset:**

1. Press & hold any button until menu screen lights up.
2. Press "MODE" repeatedly to scroll through numbers.
3. Confirm that the numbers match the box at right – in same order.
4. If incorrect number, press "UP" or "DOWN" to get correct number.
5. Check all numbers again. Press "MODE" repeatedly and go through all numbers. Make sure they match the box at right.
6. Once all numbers are confirmed, press MODE until you see 2554.

**IMPORTANT: Leave light on "2554" when finished.**

### **Standard Settings**

*All 9 numbers must appear on black light in this order:*

- 2554 – *Brightness Setting*
- 0005 – *Strobe Setting*
- 0016
- 0027 – *Sound Active Setting*
- 0028
- 0020
- 4931
- 4932
- 4933

## RETURN INSTRUCTIONS

1. Put light back in the same box, glass down.
2. Rotate light so that handle is on same side as foam.
3. Close flaps with foam. Then close other 2 flaps. Tape shut.
4. Remove all other shipping labels on box.
5. Attach return label. Drop off at any FedEx location.



## SPECIAL PROGRAMMING OPTIONS

### ADJUST BRIGHTNESS

1. Press “MODE” button repeatedly until you see **2554** on the display.
2. Press “UP” or “DOWN” buttons to make light brighter or dimmer.

*NOTE: Black light arrives pre-programmed to brightest setting.*

### STROBE MODE

1. Press “MODE” until **0005** is displayed.
2. Press “UP” to strobe faster. (*0265 is fastest*)
3. To turn OFF strobe mode, set to **0005**.



### PULSE TO MUSIC

1. Press “MODE” until **0027** is displayed.
2. Press “UP” button until display shows **0017**.
3. Place black light close to a speaker so that it picks up vibration from bass beats.
4. To turn OFF sound active mode, set to **0027**.

## RESET TO STANDARD SETTINGS

Follow the instructions on Page 1 for Troubleshooting – Light Not Working.

## HOW TO UNPLUG ON BLACK LIGHT

Slide the silver switch up (away from the light), and twist plug counter clockwise (left) to disconnect. Connect plug to the BLUE socket on the black light. Turn the plug clockwise (to the right) to lock it in place.



## YOUTUBE VIDEOS:

Scan QR code for setup and troubleshooting videos.

