

BLACK LIGHT – SETUP INSTRUCTIONS

**Keep all packaging materials after opening. Black light must be returned in same box / packaging.*

1. PLUG IT IN

Use power cord provided to plug black light into an outlet. Connect plug to the BLUE socket on the black light. Turn the plug clockwise (to the right) to lock it in place.



2. SET ON TABLE

Set the black light on a table and point it at the area you want to glow. Use the knobs to aim the light: Twist knobs to the left to loosen, adjust the bracket legs as desired, then twist knobs to the right to lock in place.



3. YOU'RE DONE!

See reverse for more programming and setup options.

RENTAL RETURN INSTRUCTIONS

1. Put the black light back in the same shipping box, with the glass / bulb facing down. There is a Styrofoam piece in the bottom of the box that will hold the blacklight in place.
2. Fill box with bubble wrap so that the light is padded on all sides.
3. Seal package with tape. (Tape available at FedEx). Remove the previous FedEx shipping label from the outside of the box and discard. Cross out anything that was written on the outside of the box (apartment number, etc.).
4. Affix the pre-paid FedEx shipping label provided to the top of the box. Drop off at any FedEx.

RETURN DATE: Rentals are due back at any FedEx location two days after your event date. If your return date falls on a Sunday or holiday, you can return the following day.

MISPLACED RETURN SHIPPING LABEL: To re-print your shipping labels, locate your shipping confirmation email from orders@rentmywedding.com. Otherwise, contact us at 1-800-465-8020.

SPECIAL PROGRAMMING OPTIONS

ADJUST BRIGHTNESS

1. Press “MODE” button repeatedly until you see **2554** on the display.
2. Press “UP” or “DOWN” buttons to make the black light brighter or dimmer.

NOTE: Black light will arrive pre-programmed to brightest setting.



STROBE MODE

1. Press “MODE” until 0005 is displayed.
2. Press “UP” to make the black light strobe speed faster. (NOTE: 0265 is the fastest strobe setting. 0005 turns off the strobe mode).

SOUND ACTIVE MODE (PULSING TO BEAT OF MUSIC)

1. Press “MODE” until **0027** is displayed.
2. Press “UP” button so that display shows **0017**. This turns on sound active mode.
3. Place black light close to a speaker so that it picks up the vibration from bass beats.
4. *To turn OFF sound active mode: press “UP” or “DOWN” button so that **0027** is displayed.*

NOTE: UNPLUGGING THE BLACKLIGHT

Slide the silver switch up (away from the light), and twist plug counter clockwise (left) to disconnect.

