

PRO GOBO – SETUP INSTRUCTIONS

*****Keep Packing Materials - Projector must be returned in plastic case*****

SETUP GOBO PROJECTOR

1. Plug projector into outlet using power cord provided. It is pre-loaded with your design/color.
2. Place projector on table or tripod (*optional add-on*).
3. Aim projector where you want to display image. Use bracket to adjust the angle.
4. Twist focus knob until image is in focus.



IMAGE SIZE

The farther away the projector is from the wall / floor, the larger the image will be.

ROTATE IMAGE

1. Press “**Mode**” until “**Nan**” appears on the menu screen. Press “**Enter**”.
2. The word “**Gobo**” will appear on screen; press “**Enter**”.
3. The word “**Stop**” will appear on screen.
4. Press “**UP**” or “**DOWN**” and the image will rotate.
5. Once image aligned, lock in place by pressing “**UP**” or “**DOWN**” button until you see “**Stop**” on menu screen.

Troubleshooting: Image Not Visible or Not Projecting

- a. **Reset Projector:**
 - i. Press “**Mode**” button on back of projector until “**REST**” appears on display. Press **ENTER**.
 - ii. *If still not appearing, continue with next steps.*
- b. **Change Mode:**
 - i. Hit “**Mode**” button on back of projector until you see “**LoAd**” on display. Press “**ENTER**”.
 - ii. Press “**Mode**” button until “**nAn**” appears on the display. Press “**ENTER**”.
 - iii. You should now see “**Gobo**” appear on the display. Projection image should be visible.
- c. To stop rotating image, press “**Manual**” button on the remote.

RETURN INSTRUCTIONS

1. Put gobo back in the plastic case. Secure with zip ties (provided inside case).
2. Prep for shipping:
 - a. If you ordered only a projector (*OR if there is a shipping label on plastic case*):
 - i. Remove prior shipping label. Affix pre-paid return shipping label.
 - b. If you rented other items (*no shipping label on plastic case*):
 - i. Put plastic case inside cardboard box with other items

