

# UPLIGHTING SETUP INSTRUCTIONS

---

***\*\*Keep all packaging materials. Uplights must be returned in same box / packaging.\*\****

## **SELECT COLOR**

1. Use the power cord provided to plug the uplight into a power outlet.
2. Press "MENU" repeatedly until "C" shows on the display.
3. Press "ENTER"
4. Use the "UP" or "DOWN" button to select one of the standard color options:

C1 = Red

C3 = Blue

C5 = Magenta

C7 = White

C2 = Green

C4: =Light Blue

C6 = Yellow

***\*\*For More Colors, See Below***

5. Press "ENTER" to save the color.

## **SETUP LIGHTS**

1. Place the uplight on the floor, close to a wall or other surface.
2. Tilt light towards wall until desired effect is achieved. Adjust legs by twisting knobs on each side.
3. Link uplights together. Power cords can plug into outlet OR another uplight. Link 40 lights per outlet.

## **MORE COLOR OPTIONS**

---

To program a custom color, find your color's "rgb" code from the chart on the back of this page. Then follow these steps:

1. Press "MENU" repeatedly until "U" shows on the display. Press "ENTER"
2. You should see "r" with a number. Press "UP" or "DOWN" to set the "r" value for your color. Press "ENTER"
3. You should see "g" with a number. Press "UP" or "DOWN" to set your "g" value. Press "ENTER"
4. You should see "b" with a number. Press "UP" or "DOWN" to set your "b" value. Press ENTER. ***You're Done!***

## **SPECIAL PROGRAMMING**

---

### **Sound Active Mode**

1. Press the MENU button repeatedly until "P—" shows on the display. Press ENTER.

2. Press the UP or DOWN buttons until "P5" or "P6" shows on the display. Press ENTER.

***\*\*NOTE: Select P5 for uplight to cycle through 7 colors; select P6 for uplight to cycle through 3 colors.***

3. Turn on music and adjust the microphone sensitivity knob until the uplight starts reacting to music

### **Color Switching / Fading Modes**

1. Press the MENU button repeatedly until "P—" shows on the display. Press ENTER.

2. Press the UP or DOWN buttons until P1, P2, P3, or P4 shows on the display. Press ENTER.

P1: Color Switching – 7 Colors

P2: Color Fading – 7 Colors

P3: Color Switching – 3 Colors

P4: Color Fading – 3 Colors

3. Press the MENU button repeatedly until "S—" shows on the display.

4. Use the UP or DOWN buttons to adjust the color changing speed. Press Enter.

S001: Slowest

S100: Fastest

## CUSTOM COLOR CHART

Color Name	r, g, b Values
Red	100, 0, 0
Coral Pink	100, 10, 1
Coral Orange	100, 15, 1
Light Coral Pink	90, 10, 2
Salmon	100, 10, 2
Light Salmon	75, 10, 2
Orange	100, 8, 0 <b>OR</b> 88, 5, 0
Light Orange	99, 15, 0 <b>OR</b> 100, 15, 0
Amber Yellow	100, 30, 0 <b>OR</b> 99, 30, 0
Amber Orange	94, 18, 0 <b>OR</b> 100, 20, 0
Moccasin	99, 27, 8
Papaya Whip	100, 29, 8
Peach	100, 25, 13
Yellow	100, 99, 0 <b>OR</b> 100, 80, 0
Gold	100, 37, 0
Neon Yellow	100, 100, 0
Light Yellow	100, 45, 1
Pale Light Yellow	97, 50, 10
Green	0, 100, 3
Lime Green	0, 100, 0
Green Yellow	50, 100, 0
Lawn Green	40, 99, 0
Chartreuse	89, 100, 0
Yellow Green	85, 100, 0
Spring Green	25, 100, 5
Light Green	0, 100, 7
Pale Green	20, 100, 20
Emerald Green	0, 100, 15
Blue	0, 0, 100
Royal Blue	5, 0, 100
Dodger Blue	0, 60, 100
Sky Blue	0, 99, 100

Color Name	r, g, b Values
Light Blue	18, 95, 100
Powder Blue	5, 100, 100
Alice Blue	8, 45, 60
Aqua	0, 100, 75
Light Aqua	25, 100, 75
Turquoise Blue	0, 99, 53
Turquoise Green	0, 100, 53
Tiffany Blue	0, 99, 60
Aqua Marine	0, 100, 35 <b>OR</b> 0, 29, 8
Purple	51, 0, 77 (Note: enter a "b" value of any number between 77-99 for different shades of purple)
Violet	21, 0, 100
Medium Purple	40, 0, 98
Medium Orchid	51, 0, 98
Plum	51, 15, 99
Orchid	65, 0, 99
Magenta/Fuchsia	65, 0, 55
Hot Pink	100, 0, 13
Pink	100, 6, 8
Petal Pink	100, 17, 13
Light Pink	100, 10, 13
Misty Rose	100, 50, 76
Sea Shell	100, 34, 14
Bisque	100, 50, 10
Blanched Almond	100, 50, 15
Corn Silk	100, 50, 20
Lavender Blush	99, 40, 99
Old Lace	100, 50, 40
White	100, 100, 100
Honeydew	8, 45, 10
Mint Cream	8, 35, 10
Ivory	100, 85, 9
Snow	100, 71, 76
White Smoke	50, 50, 100

### **RETURN INSTRUCTIONS**

Put each upright into plastic bubble wrap pouch provided. Then place lights in shipping box. Place the power cords on top. Then fill box with packing paper. Drop off at any FedEx location 2 days after event.