

PREMIUM FLOOR / DARK SURFACE GOBO PROJECTOR - SETUP INSTRUCTIONS

****Retain Packing Materials - Projector must be returned in plastic case****

SETUP GOBO PROJECTOR

1. Plug projector into outlet. It is pre-loaded with your design/color.
2. Place projector on table or tripod (*optional add-on*).
3. Aim projector where you want to display image. Use bracket to adjust angle.
4. Focus Image:
 - a. Locate the 2 knobs near top / front of projector.
 - b. Twist to the left to loosen slightly (*just enough so knobs slide – do not unscrew them all the way or loosen too much*)
 - c. Slide knobs until the image is clear.
 - d. Twist knobs to right to lock into place. (Do not over tighten!)



IMAGE SIZE

The farther away the projector is from the wall / floor, the larger the image will be.

ALIGN / ROTATE IMAGE

1. Press "MENU" button until "GOBO" appears on display screen. Then press "ENTER". *You should see "Stop"*
2. Press "UP" button until you see "L-SP" appear on the display. *The image should now be rotating.*
3. When image is in correct position press "DOWN" button.
4. Press "ENTER".

NOTE: If instead of "L-SP" you see "L" with a number, press "ENTER" until you do see "L-SP." Then press "ENTER" when you see "STOP" appear on the display.

BRIGHTNESS

1. Press "MENU" button until "U" shows on display screen. Then press "ENTER".
 2. Press UP or DOWN buttons to increase or decrease brightness. (Larger number = brighter). Then press "ENTER".
- NOTE: Brightness more than 220 reduces projector runtime to 3-5 hours. At 200-220 brightness, runtime is 6-8 hours.*

SPIN/ROTATE MODE

1. Press "MENU" until "GOBO" appears on display screen. Then press "ENTER" and "Stop" will appear on display.
2. Press "UP" until you see "L-SP" appear on the display. Then press "ENTER".
3. You should now see the letter "L" with a number. Press UP to increase the number (speed), or DOWN to decrease the number (speed). (255 = fastest / 0 = slowest)
****If you do not see L with a number right away, press ENTER until you do.*
4. When the image is spinning at your desired speed, Press "ENTER".

RETURN INSTRUCTIONS

1. Put projector back in plastic case. Secure with zip ties (provided inside case).
 2. Remove prior shipping label. Affix return label.
- **NOTE:** If projector arrived in cardboard box, just put plastic case with projector back into cardboard box. (We consolidate items when possible if renting multiple products).

