

# UPLIGHTING SETUP INSTRUCTIONS

---

**\*\*Keep all packaging materials. Uplights must be returned in same box / packaging.\*\***

## **SELECT COLOR**

1. Use the power cord provided to plug the uplight into a power outlet.
2. Press "MENU" repeatedly until "C" shows on the display.
3. Press "ENTER"
4. Use the "UP" or "DOWN" button to select one of the standard color options:

C1 = Red

C3 = Blue

C5 = Magenta

C7 = White

C2 = Green

C4: =Light Blue

C6 = Yellow

**\*\*For More Colors, See Below**

5. Press "ENTER" to save the color.

## **SETUP LIGHTS**

1. Place the uplight on the floor, close to a wall or other surface.
2. Tilt light towards wall until desired effect is achieved. Adjust legs by twisting knobs on each side.
3. Link uplights together. Power cords can plug into outlet OR another uplight. Link 40 lights per outlet.

## **MORE COLOR OPTIONS**

---

To program a custom color, find your color's "rgb" code from the chart on the back of this page. Then follow these steps:

1. Press "MENU" repeatedly until "U" shows on the display. Press "ENTER"
2. You should see "r" with a number. Press "UP" or "DOWN" to set the "r" value for your color. Press "ENTER"
3. You should see "g" with a number. Press "UP" or "DOWN" to set your "g" value. Press "ENTER"
4. You should see "b" with a number. Press "UP" or "DOWN" to set your "b" value. Press ENTER. **You're Done!**

## **SPECIAL PROGRAMMING**

---

### **Sound Active Mode**

1. Press the MENU button repeatedly until "P—" shows on the display. Press ENTER.

2. Press the UP or DOWN buttons until "P5" or "P6" shows on the display. Press ENTER.

**\*\*NOTE: Select P5 for uplight to cycle through 7 colors; select P6 for uplight to cycle through 3 colors.**

3. Turn on music and adjust the microphone sensitivity knob until the uplight starts reacting to music

### **Color Switching / Fading Modes**

1. Press the MENU button repeatedly until "P—" shows on the display. Press ENTER.

2. Press the UP or DOWN buttons until P1, P2, P3, or P4 shows on the display. Press ENTER.

P1: Color Switching – 7 Colors

P2: Color Fading – 7 Colors

P3: Color Switching – 3 Colors

P4: Color Fading – 3 Colors

3. Press the MENU button repeatedly until "S—" shows on the display.

4. Use the UP or DOWN buttons to adjust the color changing speed. Press Enter.

S001: Slowest

S100: Fastest

## CUSTOM COLOR CHART

| Color Name        | r, g, b Values                  |
|-------------------|---------------------------------|
| Red               | 100, 0, 0                       |
| Coral Pink        | 100, 10, 1                      |
| Coral Orange      | 100, 15, 1                      |
| Light Coral Pink  | 90, 10, 2                       |
| Salmon            | 100, 10, 2                      |
| Light Salmon      | 75, 10, 2                       |
| Orange            | 100, 8, 0 <u>OR</u> 88, 5, 0    |
| Light Orange      | 99, 15, 0 <u>OR</u> 100, 15, 0  |
| Amber Yellow      | 100, 30, 0 <u>OR</u> 99, 30, 0  |
| Amber Orange      | 94, 18, 0 <u>OR</u> 100, 20, 0  |
| Moccasin          | 79,11,0                         |
| Papaya Whip       | 100, 50,6                       |
| Peach             | 100, 40,5                       |
| Yellow            | 100, 65, 0 <u>OR</u> 100, 80, 0 |
| Gold              | 100, 37, 0                      |
| Neon Yellow       | 100, 62, 0                      |
| Light Yellow      | 100, 65, 2                      |
| Pale Light Yellow | 97, 50, 10                      |
| Green             | 0, 100, 3                       |
| Lime Green        | 0, 100, 0                       |
| Green Yellow      | 50, 100, 0                      |
| Lawn Green        | 40, 99, 0                       |
| Chartreuse        | 89, 100, 0                      |
| Yellow Green      | 85, 100, 0                      |
| Spring Green      | 25, 100, 5                      |
| Light Green       | 0, 100, 7                       |
| Pale Green        | 20, 100, 7                      |
| Emerald Green     | 0, 100, 15                      |
| Blue              | 0, 0, 100                       |
| Royal Blue        | 5, 0, 100                       |
| Dodger Blue       | 0, 60, 100                      |
| Sky Blue          | 0, 99, 100                      |
| Blush Pink        | 30, 15, 9                       |

| Color Name      | r, g, b Values   |
|-----------------|--|
| Light Blue      | 18, 95, 100  |
| Powder Blue     | 5, 100, 100  |
| Alice Blue      | 8, 45, 60  |
| Aqua            | 0, 100, 75   |
| Light Aqua      | 25, 100, 75  |
| Turquoise Blue  | 0, 99, 53  |
| Turquoise Green | 0, 100, 53   |
| Tiffany Blue    | 0, 99, 60  |
| Aqua Marine     | 18, 95, 100  |
| Purple          | 51, 0, 77 (Note: enter a "b" value of any number between 77-99 for different shades of purple) |
| Violet          | 21, 0, 100   |
| Medium Purple   | 40, 0, 98  |
| Medium Orchid   | 51, 0, 98  |
| Plum            | 51, 15, 99   |
| Orchid          | 65, 0, 99  |
| Magenta/Fuchsia | 65, 0, 55  |
| Hot Pink        | 100, 0, 13   |
| Pink            | 100, 6, 8  |
| Petal Pink      | 100, 17, 13  |
| Light Pink      | 100, 10, 13  |
| Misty Rose      | 100, 50, 76  |
| Sea Shell       | 100, 34, 14  |
| Bisque          | 100, 50, 10  |
| Blanched Almond | 100, 50, 15  |
| Corn Silk       | 100, 50, 20  |
| Lavender Blush  | 99, 40, 99   |
| Old Lace        | 100, 50, 40  |
| White           | 100, 100, 100  |
| Honeydew        | 8, 45, 10  |
| Mint Cream      | 8, 35, 10  |
| Ivory           | 100, 85, 9   |
| Snow            | 100, 71, 76  |
| White Smoke     | 50, 50, 99   |

### **RETURN INSTRUCTIONS**

Put each upright into plastic bubble wrap pouch provided. Then place lights in shipping box. Place the power cords on top. Then fill box with packing paper. Drop off at any FedEx location 2 days after event.